

ALCATEL

阿爾卡特之公司標誌及名稱為阿爾卡特之註冊商標,ATLINKS 授權 依有關牌照條款使用。

本話機附有來電顯示功能,這功能由您的電信公司所提供,來電 顯示功能可以讓您:


- 接電話前可以知道誰打電話來。 • 記錄每通電話的日期與時間。
- 記錄68通來電顯示的號碼。

主要特點

- 自動偵測FSK/DTMF來電顯示規格
- 記錄15組最後撥出的號碼
- ・記錄68通來電顯示號碼
- 拿起話筒前預撥電話號碼
- 重撥上通電話
- 支援音頻(tone)與轉盤式/脈衝式(pulse)撥號模式 ·設定瞬切(flash)時間
- 靜音模式
- 免持聽筒 為了讓您可以充分使用本話機的功能,請您仔細閱讀本手冊。

零附件確認

請確認包裝盒內有如下列圖示的主體與零附件:

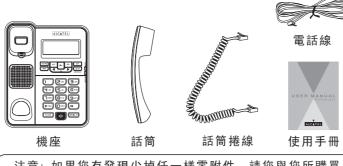

注意: 如果您有發現少掉任一樣零附件, 請您與您所購買 的零售商聯繫

電話插座的要求

您家裡必須具備如右圖所示的RJ-11插座, 如果您家裡無像這樣的插座,請與您的 電信服務商聯繫。



重要安裝資訊

注意: 在安裝或者更換電池之前必須將電話線從 ■ 電話插座拔下。


- 不要在打雷的時候安裝電話線
- •除非電話線路已經從電話網路斷開,不要拆裝電話線或者電
- 在安裝或者調整電話線路前請閱讀注意事項。
- 不要將電話插座安裝在潮濕的環境,除非這個電話插座是專 門設置在潮濕環境中使用。

安裝電池

你的來電顯示電話使用三個AA規格鹼性電池,用來接收儲存來 電記錄和儲存快速撥號的號碼。

重要事項:如果您打算不使用電話超過30天,請取出電池。 因為電池有可能漏出電解液並損壞電話機

- 1. 確認話機不要連接到電話插座。
- 2. 翻到話機的背面,用原子筆或是螺絲起子把電池盒蓋子弄鬆 下壓蓋子再平移就可以把蓋子打開。
- 3. 裝入三顆AA的鹼性電池(電池請自行準備), 您可以參考附圖
- 4. 把電池盒的蓋子關上,這時候您可以接回電話插座。

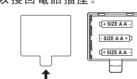

安裝電話機

選擇一個合適的地點安裝電話機,電話機需要放置在平面上, 如檯面或者桌面,或者安裝在墻上。

連接電話線

- 1. 座機上的捲狀線連接到 話機。
- 2. 座機上的直線連接到牆 上的電話插座。



安裝電話機在牆上 1. 如圖所示,旋轉掛勾180度。









掛牆: 這個掛勾是用來把話筒勾住以 防止掉落。


2. 把機座掛到牆上,把電話線一端連接到牆上的電話插座,另 一端連到電話機座的冒圖示的插孔。

3.機座後面有兩個孔位可以提供給您掛牢電話在牆壁上。

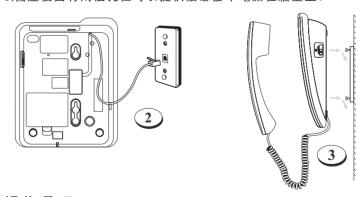

操作選項

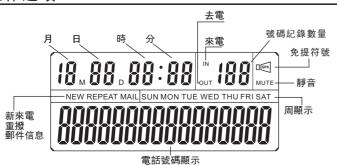

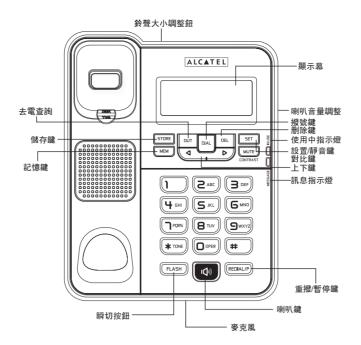

設定電話

請跟據您的需要立即設定您的電話。

有四種設定選項

\${{{ | dR}{{ | 日期與時間設定。

{{{ } } } PCOde的設定讓您可以加一個號碼在撥出的號碼前面, 省去每次都要按相同號碼的麻煩。

{{{}} } {⋅} 選擇撥號模式.可以根據您所在地電信營運商所提供的服務做適當的設定。

設定日期/時間




設定Pcode




設定音頻/脈衝式撥號服務

SET FLASH

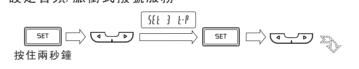




選擇瞬切時間

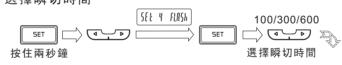

操作電話

接聽來電

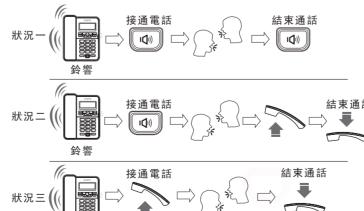





打電話






顯示幕亮度調整 在掛機的狀態下,按靜音鍵(Mute)就可以調整顯示幕的對比度。

脈衝式撥號模式使用音頻模式 在脈衝式撥號服務範圍內如需要使用音頻模式可按*鍵轉換。

重撥號碼

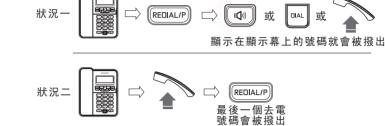

在通話的狀態下,您可以按下靜音鍵讓對方無法聽到您的聲音, 這時顯示幕上會顯示靜音狀態,如果要取消靜音,只要再按一 次靜音鍵。


來電顯示的特點

來電顯示(CID)服務是由當地電信公司所提供,您必須確認您的 電信公司有對您提供這樣的服務才能使用本話機的來電顯示功 能。本話機的來電顯示功能不需要做任何的設定就可以使用。 通常包含來電號碼, 名字, 日期與時間。

查閱來電



從來電顯示的號碼中回撥

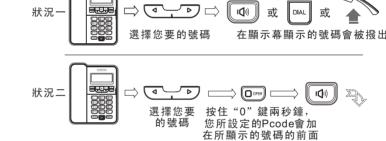








查閱撥出的號碼



從撥出的號碼中重撥一組號碼

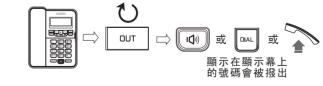

刪除來電號碼



選擇想要儲存的號碼

儲存操作



STORE | STORE | OPER ... STORE |

想要記憶的位置0-9

儲存撥出的電話號碼



從記憶位置撥出電話





刪除記憶位置中的號碼



問題排除

沒有撥號音

- 確認所有的連線都已經接好並且沒有斷掉或是損壞
- 確認瞬切紐是不是卡住。

顯示幕沒有任何顯示

電話撥出出現轉盤聲

- 更換電池。
- 確認電池是不是按照方向裝置妥當

有來電但是沒在顯示幕上顯示

確認您的電信公司有開通這樣服務。接聽電話前多響一次,因為有時候訊息會比較慢傳送進來。

• 確認話機設定在音頻撥號模式。

在脈衝式撥號服務範內不能撥打電話 • 請確認話機設定在脈衝式撥號模式。

電話不會響

• 您也許家裡裝太多分機,請試著拔掉一些分機看看 • 確認您的話機安裝正確有撥號音。

確認其他分機有掛好,如果沒有掛好音量低是正常的檢查音量調整按鈕是不是設定在太低的音量。

音量很低

保養您的電話 為了讓您的電話運作正常並保持在良好狀態,請參閱下列的保 養方法:

- 1. 避免把電話放在會產生熱源的機器旁,像是馬達或是會發燙
- 2. 不要直接把電話曝曬在陽光下或是灰塵很多的地方。
- 3. 避免掉落地上或是其他會造成劇烈晃動的動作。
- 4. 使用軟布清潔表面。 5. 不要使用強烈的清潔劑或是清潔粉因為這樣可能會損壞電話
- 表面。 6. 建議您保留原廠的盒子,要是您日後要寄送裝在盒子可為您 的電話提供最好的保護。



此產品的棄置必須遵守現行的環境保護條例,可將此 產品交予您的經銷商或專業回收中心。

USER MANUAL

TEMPORIS 55-EX(TW)

ALCATEL

Alcatel Logo and Alcatel name are trademarks of Alcatel and used under license by ATLINKS.

INTRODUCTION

Your Caller ID phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller ID or similar caller identification services.

Your Caller ID phone enables you to:

- · Identify callers before you answer the phone.
- Record up to 68 Caller ID messages sequentially.

MAIN FEATURES

- FSK/DTMF Caller ID auto detect
- Incoming call log records up to 68 calls
- Outgoing call log records up to 15 last dialed numbers • 10 two-touch memories
- On hook pre-dialing
- Prefix Code
- Redial
- Pulse or Tone dialing mode
- Mute function
- Speakerphone

PARTS CHECKLIST


To get the most from your new phone, you are suggested to take a few minutes right now to read through this user guide.

SHORT GLOSSARY OF TERMINOLOGY USED IN THIS MANUAL **Hook switch.** The part of the phone that pops up to activate the phone line when the handset is lifted from the base.

Off-hook. A term used to describe the phone in its active mode when the

handset is off of the base cradle or when the SPEAKER button is pressed. **On-hook.** A term used to describe the phone in an inactive mode.

Make sure your package includes the items:

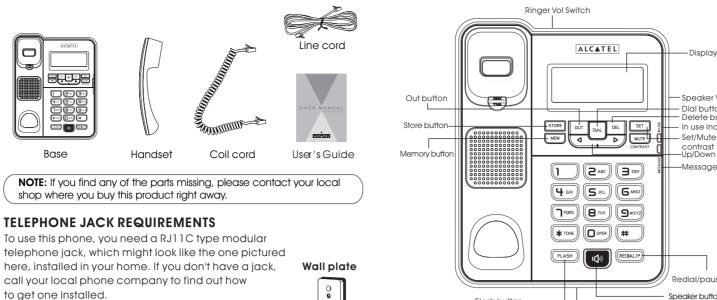

INSTALLATION

CAUTION: Disconnect the phone cord from the wall outlet before installing or replacing the batteries.

Modular telephone | o

line iack

- Never install telephone wiring during lightning storm.
- Never touch un-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Never install telephone jack in wet location unless the jack is specifically designed for wet locations.
- Temporarily disconnect any equipment connected to the phone, such as faxes, other phones or modems.

INSTALLING AND REPLACING THE BATTERIES

Your Caller ID phone uses 3 AA-Size alkaline batteries for receiving and storing Caller ID records and for storing the numbers you use for frequently.

IMPORTANT: If you are not going to use the telephone for more than 30 days, remove the batteries because they may leak and damage the unit.

BATTERY

- 1. If the telephone line cord is connected, disconnect it from the base unit.
- 2. Carefully turn over the phone, use a pen or paper clip to loosen the battery cover. Open the battery compartment by pushing on the battery cover and sliding it away from the unit.
- 3. Insert 3 AA-size alkaline batteries (not included) as shown
- on the diagram in the battery compartment 4. Snap the battery compartment door back
- into place. 5. If the line cord was previously connected, reattach it to the unit and check your

memory locations. INSTALLING THE PHONE

Your phone should be placed on a level surface, such as a desk or t able top, or you can mount it on a wall.

- 1. Connecting the handset.
- 2. Connecting the telephone line.



+ SIZE A A -

- SIZE A A +

+ SIZE A A -


WALL MOUNTING

1. Rotate the wall mounting knob as shown in the following layout:




2. Install the base unit to the wall and then plug one end of line cord into the junction box and the other end into modular telephone line jack marked

3. Fix the telephone in the wall as the following layout.

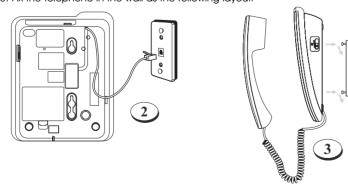

OPTIONS MENU



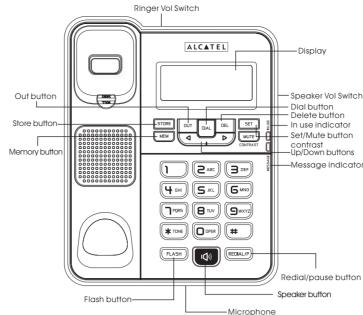

SETTING THE PHONE

NOTE: Proceed immediately to change any of the following factory preset as required

There are 4 options to set:

- $\{\{\}\}$ Date and Time Setting.
- $\{\{\}\}$ Pcode is a prefix code that user may add to the front of the number before dialing.
- $\{\{\{\cdot,\cdot\}\mid \{\cdot,\cdot\}\}$. Select the dialing mode. This is dependent of the telephone company you are connected to.
- \${{ ሀ {{ֈֈֈֈ Timing setting. This timing is to allow user to momentary access telephone services such as call waiting when **FLASH** button is pressed.


SETTING DATE/TIME




SETTING PCODE



SETTING TONE/PULSE

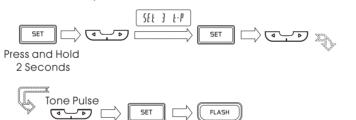


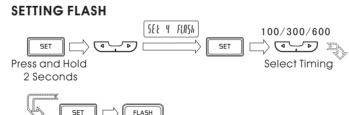

PHONE OPERATION

Select Tone or Pulse

RECEIVING A PHONE CALL

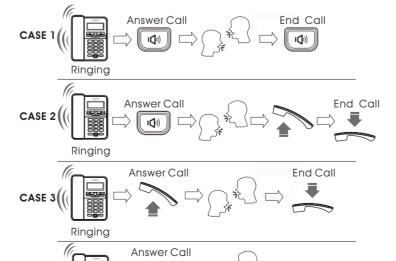

MAKING A PHONE CALL



CONTRAST LEVEL ADJUSTMENT

In on-hook state, press the MUTE button to adjust the display contrast

P=>T DIAL MODE

In PULSE dialing mode, press[*] button to access TONE service.

REDIAL

CASE



In off-hook state, user can press the MUTE button to access mute function, when MUTE is on, the MUTE indicator will show on the screen. Press the MUTE button to exit mute function and resume normal conversation.

Last number redial


CALLER ID FEATURES

Caller ID (CID) is a service available from your local telephone company. For Caller ID to work on this system, you must subscribe to Caller ID service. This unit can receive caller ID without any setting. Your Caller ID information may include the phone number, date and time.

REVIEWING INCOMING CALLS



DIAL BACK A CALLER ID NUMBER

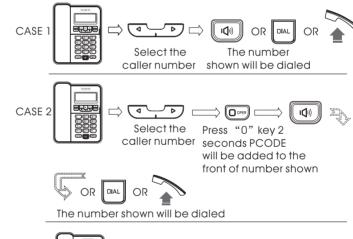






REVIEWING OUTGOING NUMBERS



DIAL BACK AN OUTGOING NUMBER

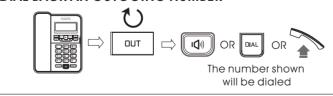

DELETING A CALLER ID NUMBER



MEMORY OPERATIONS

STORING A TELEPHONE NUMBER



STORING INCOMING CALL NUMBER



STORING OUTGOING NUMBERS INTO MEMORY



Memory Location

DIALING A MEMORY LOCATION



DELETING A MEMORY LOCATION



Select a Memory Press and Hold Location 2 Seconds

TROUBLESHOOTING TIPS

No Dial Tone

- Check all cabling to make sure that all connections are secure and not damaged
- Check hook switch: Does it fully extend when handset is lifted from cradle?

No Display

- Replace the batteries Check for proper battery installation

No Information is Shown After the Phone Rings

- Are you subscribed to Caller ID service from your local telephone company?
- Be sure to wait until the second ring before answering.

Phone Dials in Pulse with Tone Service • Make sure T/P DIAL MODE is set to TONE DIAL.

Phone Won't Dial Out with Pulse Service • Make sure T/P DIAL MODE is set to PULSE DIAL

Phone Does Not Ring

- You may have too many extension phones on your line. Try
- unplugging some extension phones. • Check for dial tone. See troubleshooting tips for no dial tone.

Incoming and Outgoing Voice Volume Low

as volume drops when additional phones are used at once. • Check the handset receiver or speaker volume.

• Are other phones off hook at same time? If so, this is normal condition

GENERAL PRODUCT CARE

To keep your phone working and looking good, follow these guidelines: • Avoid putting it near heating appliances and devices that generate

- electrical noise (for example. Motors or fluorescent lamps). • DO NOT expose to direct sunlight or moisture.
- Avoid dropping and other rough treatment to the unit. Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.



• Retain the original packaging in case you need to ship it at a later date. Used equipment must be disposed of in compliance with current environment protections. environment protection regulations. You should return it to your reseller or disposes of it in an approved recycling centre.

> Model Temporis 55-EX(TW) 10000429 (Rev.1 C/E) Printed in China